

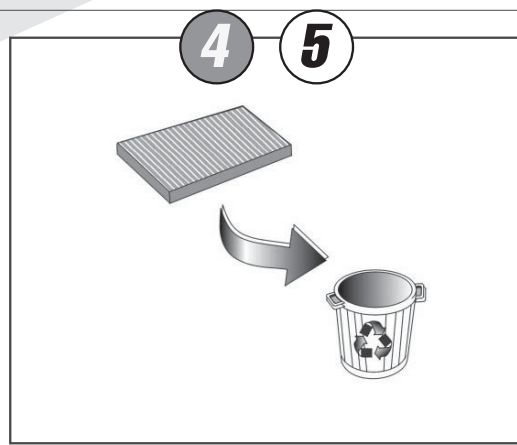


**clean filters**  
**filters NC 2000**  
**NC 2075CA**

15' Audi A4  
 10' Audi 80

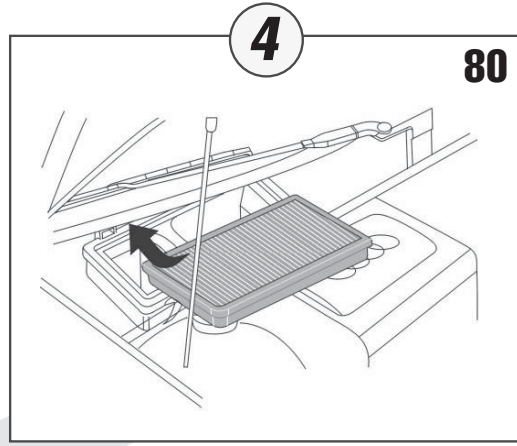

Per il montaggio procedere eseguendo le operazioni in senso inverso.  
 Continue mounting in reverse order of operations.  
 Le remontage s'effectue dans l'ordre inverse.  
 Der weitere Einbau erfolgt in umgekehrter Reihenfolge.  
 Para concluir la instalaci3n, seguir el orden inverso.

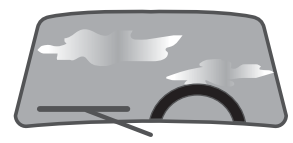