
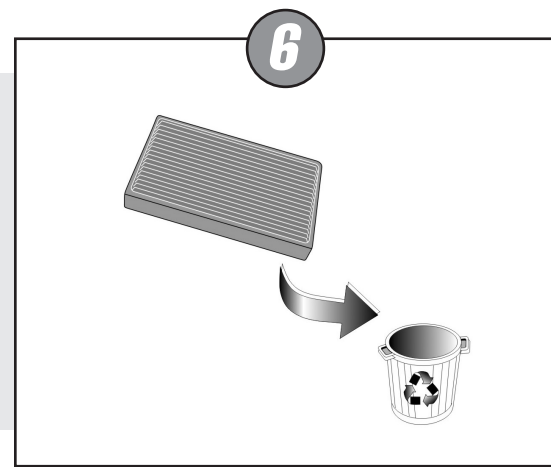
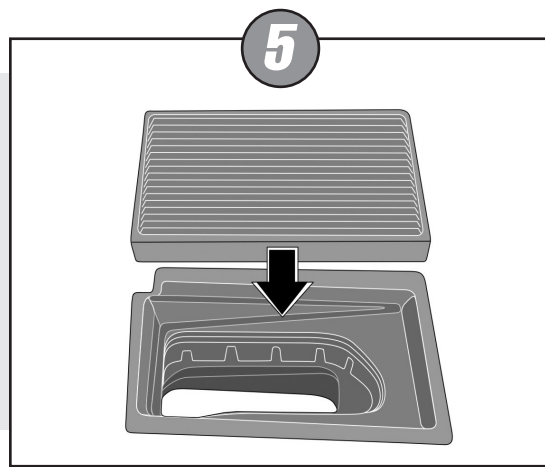


**filter NC 2056**  
**Volvo 850 1991->**  
**C70, S70, V70 ->06/00**

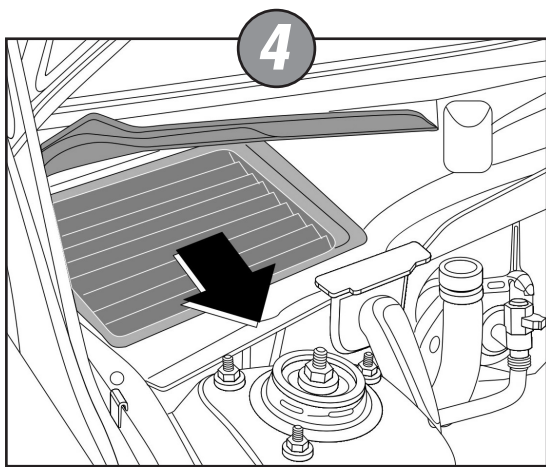

Per il montaggio procedere eseguendo le operazioni in senso inverso.

*Continue mounting in reverse order of operations.*

Le remontage s'effectue dans l'ordre inverse.

*Der weitere Einbau erfolgt in umgekehrter Reihenfolge.*

Para concluir la instalación, seguir el orden inverso.

