

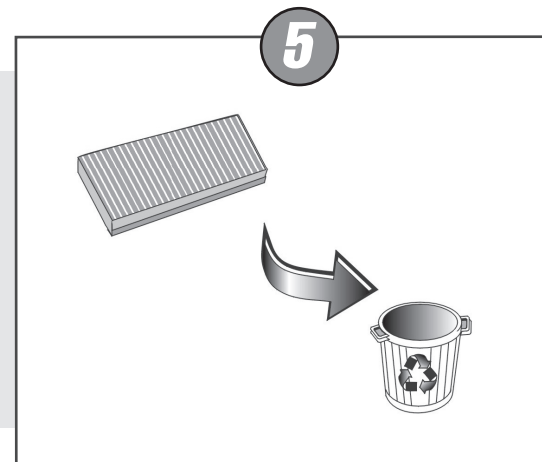
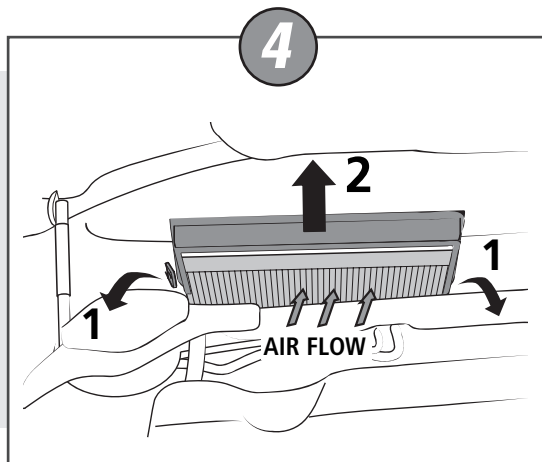
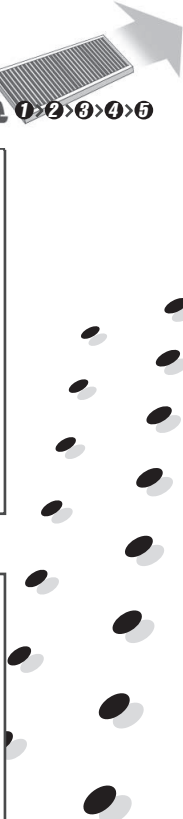
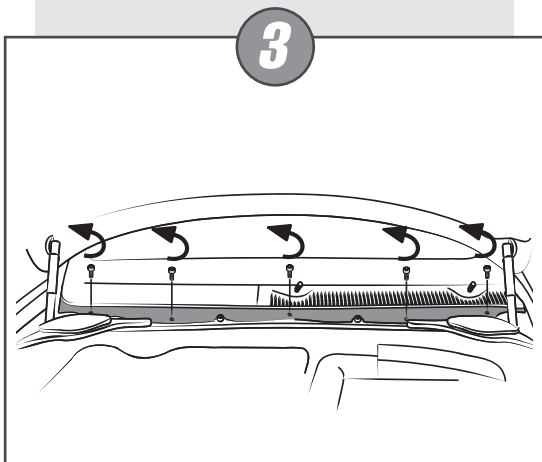


10'

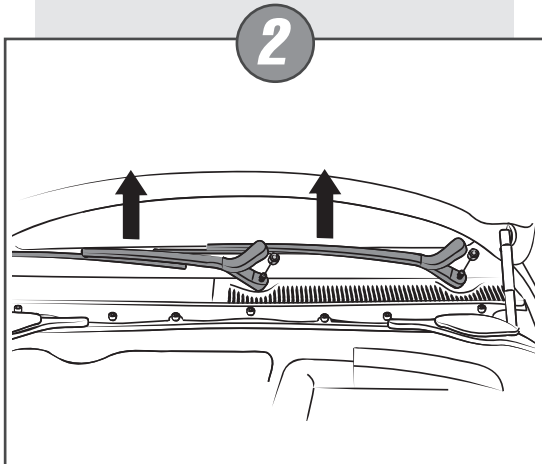

**clean**  
filters

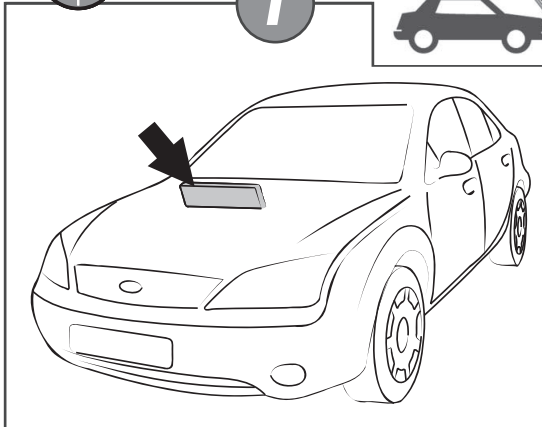

filters **NC 2107**  
**NC 2100CA**  
**FORD Mondeo III 12/00->**

Per il montaggio procedere eseguendo le operazioni in senso inverso.

*Continue mounting in reverse order of operations.*

Le remontage s'effectue dans l'ordre inverse.

*Der weitere Einbau erfolgt in umgekehrter Reihenfolge.*

Para concluir la instalación, seguir el orden inverso.

