

filter **NC2195**

Renault Clio II

Per il montaggio procedere eseguendo le operazioni in senso inverso.


Continuomounting in reverse order of operations

Le remontage s'effectue dans l'ordre inverse.

Der weitere Einbau erfolgt in umgekehrter Reihenfolge








Para concluir la instalaci3n, seguir el orden inverso.



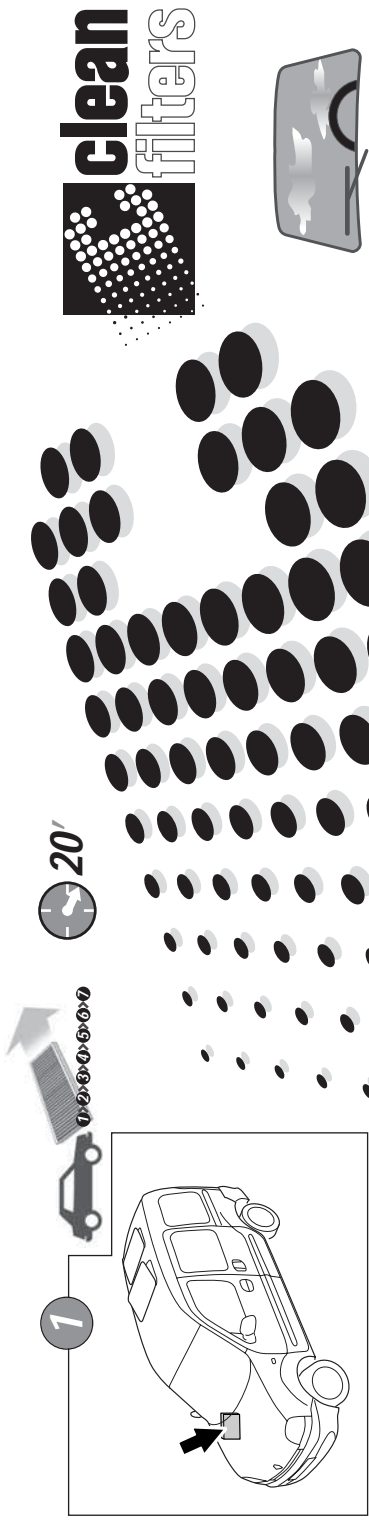

clean filters
filter NC2195
Renault Kangoo

Per il montaggio, procedere eseguendo le operazioni in senso inverso.
Continuemothing in reverse order of operations
 Le remontage s'effectue dans l'ordre inverse.
 Der weitere Einbau erfolgt in umgekehrter Reihenfolge
 Para concluir la instalación, seguir el orden inverso.

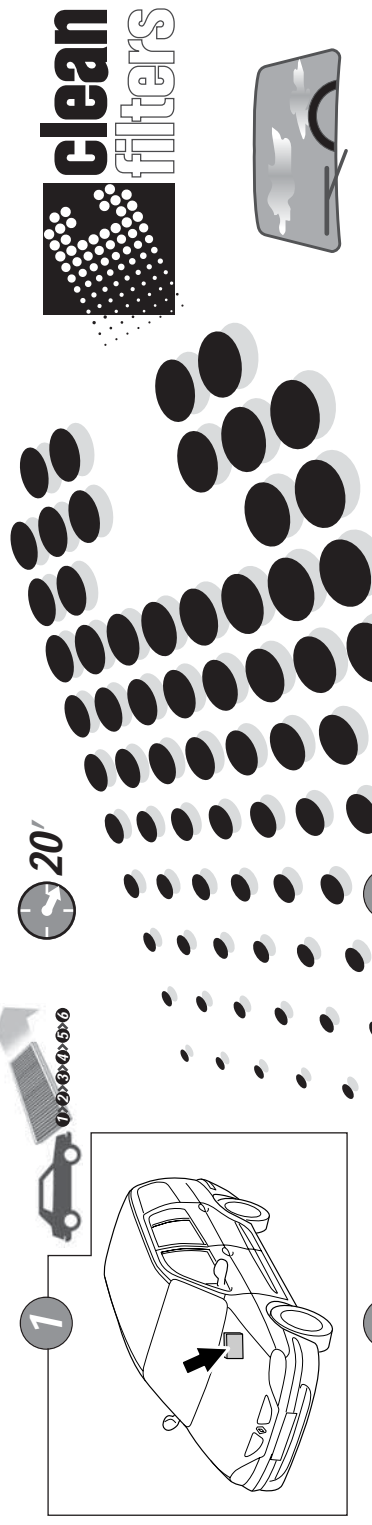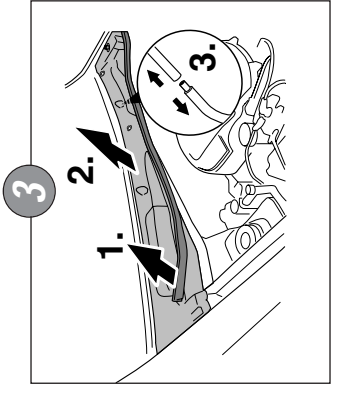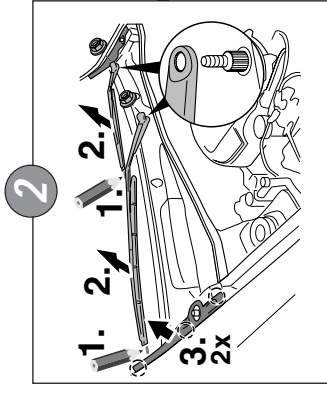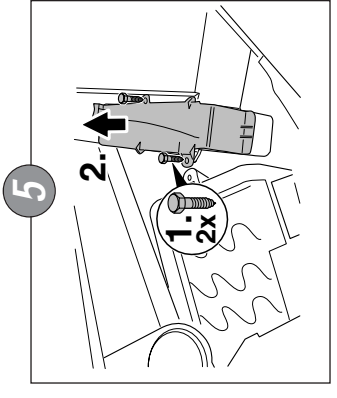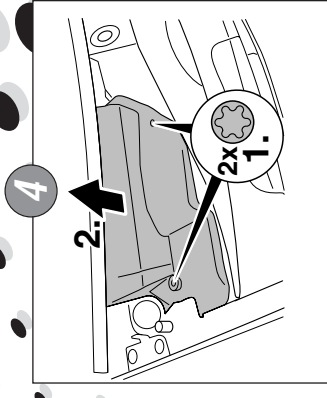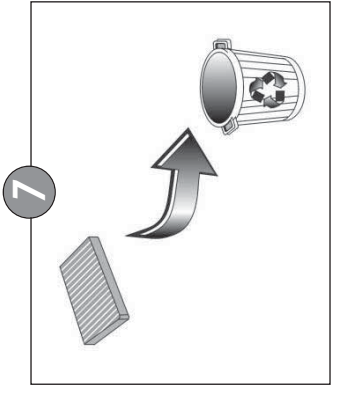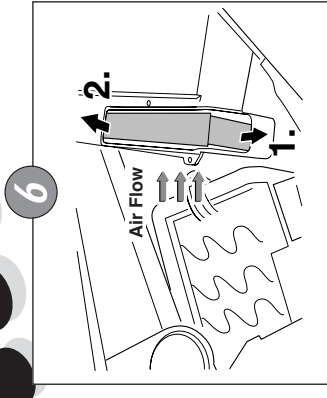

clean filters
filter NC2195
Renault Mégane Break, Grandtour, Cabrio, Classic, Coupé

Per il montaggio, procedere eseguendo le operazioni in senso inverso.
Continuemothing in reverse order of operations
 Le remontage s'effectue dans l'ordre inverse.
 Der weitere Einbau erfolgt in umgekehrter Reihenfolge
 Para concluir la instalación, seguir el orden inverso.

