
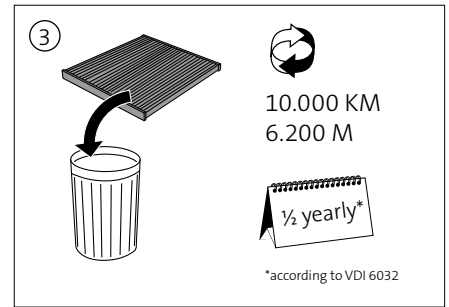
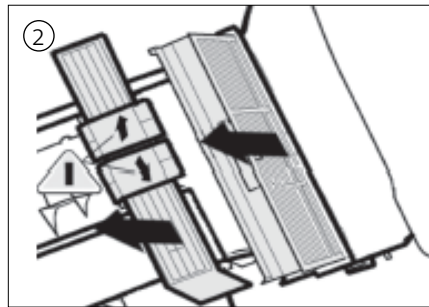


FITTING INSTRUCTIONS  
 EINBAUANLEITUNG  
 INSTRUCCIONES DE MONTAJE  
 NOTICE DE MONTAGE  
 ISTRUZIONI DI MONTAGGIO  
 INSTRUKCJA MONTAŻU  
 INSTRUÇÕES DE MONTAGEM  
 ИНСТРУКЦИЯ ПО УСТАНОВКЕ

micronAir®

Audi A2	PQ 24	05.00 ->	09.05	<b>21652356</b>
Mercedes-Benz	G-Glass W463	04.98 ->		<b>CP1074</b>
Seat Cordoba	PQ 24	10.02 ->		<b>MP060</b>
Seat	Ibiza IV	02.02 ->	09.10	<b>21652357</b>
Skoda	Fabia I	10.99 ->		<b>CC1074</b>
Skoda	Fabia II	03.07 ->	07.10	<b>MC560</b>
Skoda	Praktik	06.07 ->		
Skoda	Roomster	06.06 ->		
Volkswagen	Fox	04.05 ->		
Volkswagen	Polo (9N)	10.01 ->		
Volkswagen	Polo (6R)	06.09 ->	05.10	<b>BL560</b>

Audi, A2/Skoda Fabia

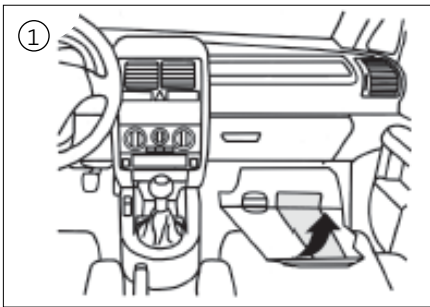

Seat Cordoba, Ibiza/VW Polo

